



# RUDDER POSITION SENSOR INSTALLATION GUIDE


## Parts Supplied

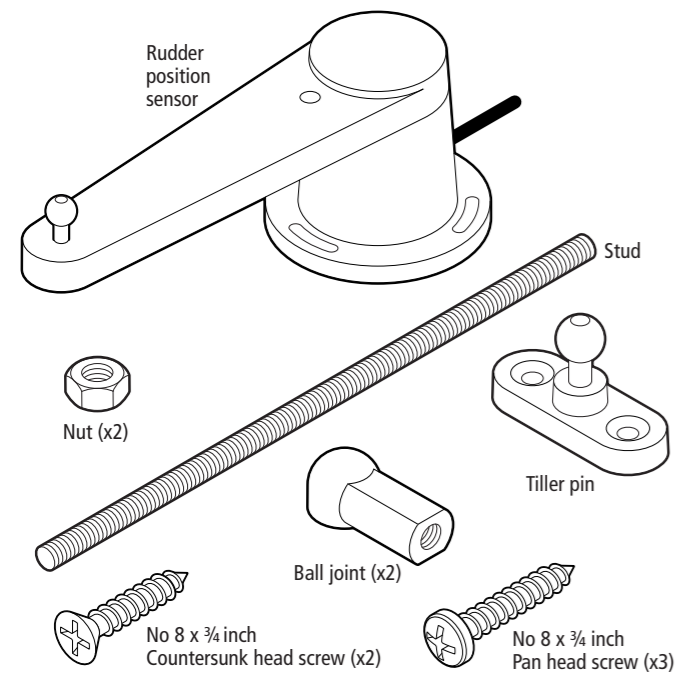

## Tools Required

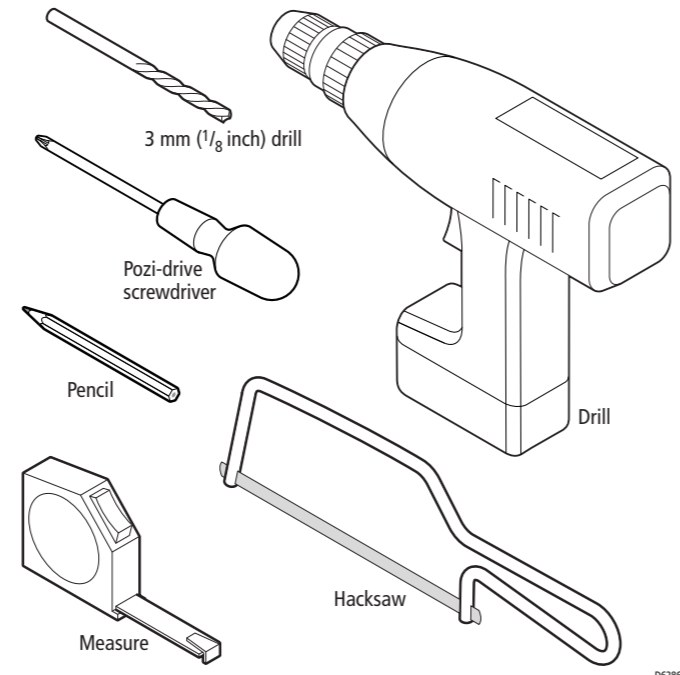


## 2.

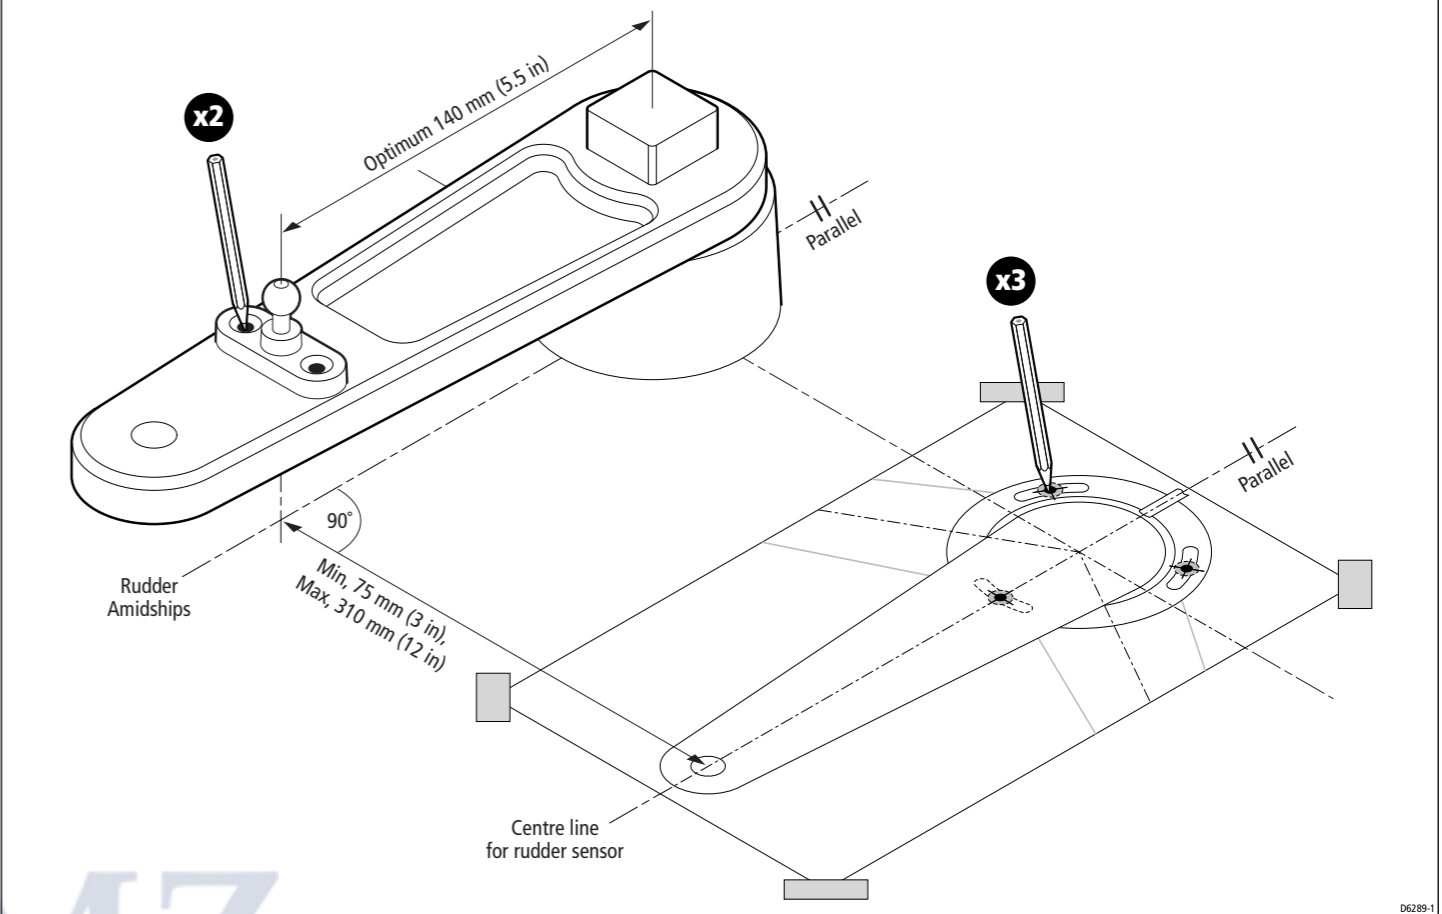

## TEMPLATE OTHER SIDE

## 1. Installation Checks

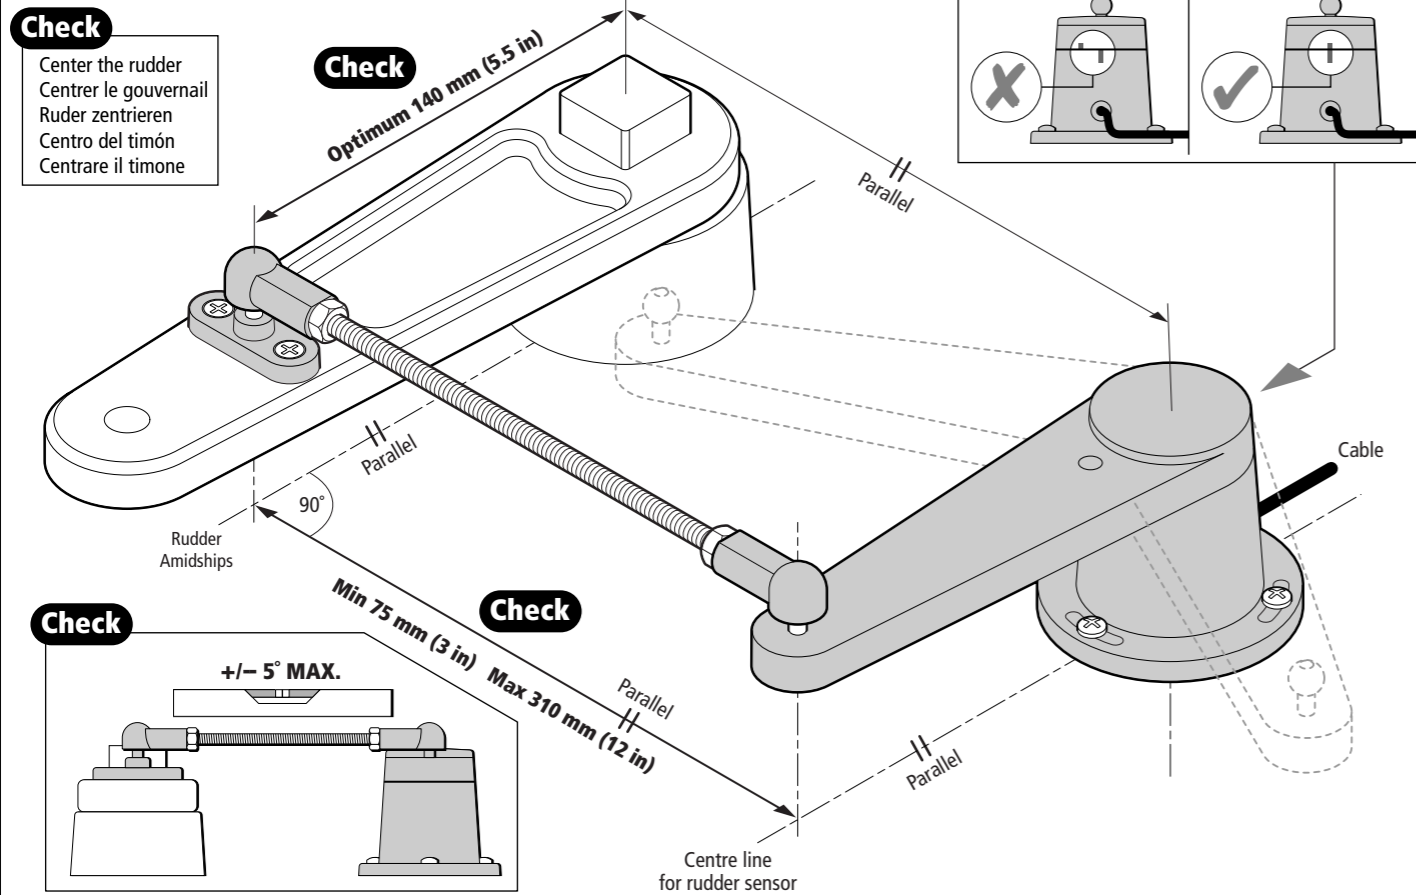

## 3.

